


# Wireless Style Switches

## Wise Style Switch

7 Channel White

---

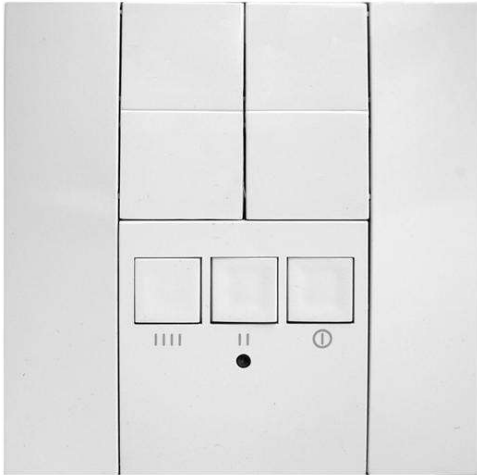

### WISEDSW7 WHITE

Type: 7 Channel

Colour: White

---

#### General

Colour	White
Operating Temperature	-10°C ~ +55°C
Radio Frequency	868.3 MHz

#### Dimensions

Depth	13mm
Height	86mm
Width	86mm

#### Electrical

Power Supply	3V Lithium Battery CR2032
--------------	------------------------------

The 1, 2 and 4 channel **Wise Style Switches** can be programmed to any of the channels on the Wise receivers. You can add up to 32 switches to the Wise receivers. This means there is no need for two way wiring as you can add another radio switch and place it where you like. You can program these switches to switch more than one Wise receiver.

The 7 channel switch works the same as the 4 channel switch and also allows access to other functions of the WiseDim and WiseBox. Button 5 will turn on all channels at previous levels. Button 6 will turn on channels 1 and 2 only, these are the circuits that are wired to the first two channels on the WiseDim. Button seven will turn off any channels that are on.

The battery life lasts up to two years.

#### Key Benefits

- Turn all circuits off
- Turn the first 2 circuits on
- Turn all 4 circuits on
- Radio switches require no wiring
- No back box required

Please Note: This is an updated version of the TXW433A04.

### Wise Controls Introduction Video

