



The **Wise Pack Room Kit** is a smart kit enabling you to control four circuits of lighting either via a wireless switch, by your phone or smart speaker.

The Wise Pack kit includes 4 x wireless receivers a 7 button keypad and a Wise Wi-fi Interface.

The **Wise Scene Leading & Trailing Edge Dimming Receiver** is a 250W 240V dimmer that is controlled by wireless switches or by a push-to-make switch. It can dim incandescent, mains halogen, low voltage halogen and LEDs. The product has a built in control circuitry that adapts to the load connected, changing automatically between leading edge and trailing edge dimming modes. It can be programmed in 5 different ways using our wireless switches:

**Option A - Scene Programming**

Programming a 7 button switch gives you 4 scenes, master raise/lower and off. A scene is a preset level of light for each circuit in a room. For example, you can have 4 receivers in your living room. Pressing scene 1 on the 7 button switch could give the following;

- Downlights = 100%
- Wall lights = 80%
- Pendant = Off
- Low level LEDs = 55%

Pressing scenes 2,3 and 4 can give other preset levels. Any level can be programmed to each receiver.

**Option B - Dimming Programming**

Programming a 1 button switch gives you on/off with a quick press and dimming up and down while holding the switch. When turning the lights on you can choose to always bring on the lights at 100% or the last dimmed level.

**Option C - Switching ON only**

Programming a 1 button switch gives you only ON. This function is used to program multiple circuits to ON.

**Option D - Switching OFF only**

Programming a 1 button switch gives you only OFF. This function is used to program multiple circuits to OFF.

**Option E - Three Button Dimming**

Programming a 3 button switch gives you raise function on the first button, dimming function on the second button and off function on the third button.

A receiver is not limited to one of the programming options. You can program a switch for scene control, another switch for dimming and another switch for master ON/OFF.

**Wireless Switches and Remotes**

A 7 button switch must be used if you require scene setting, option A. Any button switch can be used when programming options B, C and D. A 3 button switch is required for 3 button dimming, option E. To view other switches click the links on the right of this page, for example Wireless ID switches.

A wired push-to-make switch will work as a dimmer, Option B.

A Wise Scene Receiver is required for every circuit.

**Wise Controls Introduction Video**



**WISEWIFIPACKKIT**

Voltage: 240V  
Maximum Wattage: 4x250W  
Quicklink: Q52D6

**£597.00**

Excl. VAT and Delivery

**General**

Construction Plastic

**Electrical**

Maximum Wattage 1000W (4 x 250W)  
Voltage 240V

