


Programming the Wise Controls Time Clock (WISETC4)

PUSH-BUTTON FUNCTION IN MENU MODE

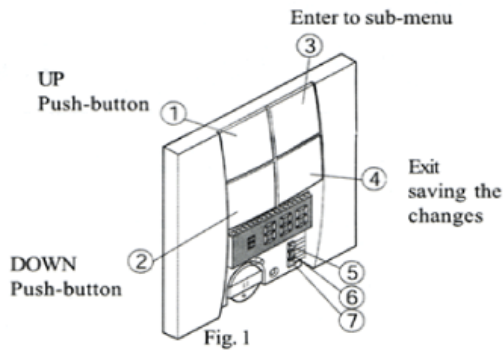

The Timeclock is shown above. The buttons used for programming are numbered as above. Buttons 1,2,3,4 also correspond to channels 1,2,3,4.

Set the time and date on the time clock.

1. Press and hold ⑤ for 3 seconds to enter the main programming menu (MENU will appear).
2. Use ① and ② to scroll up and down the different menu options. When TIME appears use ③ to select it.
3. Use ① and ② to raise and lower the hour, press ③ to confirm.
4. Use ① and ② to raise and lower the minutes, press ③ to confirm.
5. Use ① and ② to raise and lower the day, press ③ to confirm.
6. Use ① and ② to raise and lower the month, press ③ to confirm.
7. Use ① and ② to raise and lower the year, press ③ to confirm.
8. Use ① and ② to set the geographical location (2 is Great Britain), press ③ to confirm.
9. Press ④ to exit to the main menu, and ④ again to get out of programming mode.

Setting a weekly command

1. Press and hold ⑤ for 3 seconds to enter the main programming menu (MENU will appear).
2. Use ① and ② to scroll up and down the different menu options. When WEEK appears use ③ to select it.
3. Use ① and ② to choose the day, press ③ to confirm.
4. Use ① and ② to select the command (this is an operation that will tell a light to switch), press ③ to confirm.
5. Use ① and ② to raise and lower the hour, press ③ to confirm.
6. Use ① and ② to raise and lower the minutes, press ③ to confirm.
7. Use ① and ② to select the channel that will be operated by the command, press ③ to confirm.
8. Repeat instructions 3-7 to set more operations
9. Press ④ to exit to the main menu.
10. Use ① and ② to scroll up and down the different menu options. When AUTO appears use ③ to select it.
11. Use ① and ② to turn Auto function ON.
12. Press ④ to exit to the main menu.
13. Press ④ to get out of programming mode.